

# CONTENTS

Operation	File name (TH-D72_)
<b>OPERATING THROUGH REPEATERS ..... REPEATER –</b>	<b>01_REPEATER_E.pdf</b>
REPEATER ACCESS..... 1	
Selecting an Offset Direction..... 1	
Selecting an Offset Frequency..... 1	
Activating the Tone Function..... 1	
Selecting a Tone Frequency ..... 2	
Automatic Repeater Offset..... 2	
TRANSMITTING A 1750 Hz TONE ..... 3	
REVERSE FUNCTION ..... 3	
AUTOMATIC SIMPLEX CHECKER (ASC)..... 3	
TONE FREQUENCY ID..... 3	
<b>MEMORY CHANNELS ..... MEMORY CH –</b>	<b>02_MEMORY CHANNEL_E.pdf</b>
SIMPLEX & REPEATER OR ODD-SPLIT MEMORY CHANNEL?..... 1	
STORING SIMPLEX AND STANDARD REPEATER FREQUENCIES ..... 1	
Call Channel Memory (Simplex) ..... 1	
STORING ODD-SPLIT REPEATER FREQUENCIES..... 2	
Call Channel Memory (Odd-Split) ..... 2	
RECALLING A MEMORY CHANNEL..... 2	
Memory Recall Method ..... 2	
RECALLING A CALL CHANNEL..... 2	
CLEARING A MEMORY CHANNEL..... 2	
NAMING A MEMORY CHANNEL..... 3	
Frequency display <> memory name display..... 3	
MEMORY-TO-VFO TRANSFER..... 3	
CHANNEL DISPLAY FUNCTION..... 3	
<b>SCAN .....SCAN –</b>	<b>03_SCAN_E.pdf</b>
SELECTING A SCAN RESUME METHOD ..... 1	
Time-Operate Resume Time..... 1	
Carrier-Operated Resume Time..... 1	
VFO SCAN ..... 2	
MEMORY SCAN..... 2	
Locking Out a Memory Channel..... 2	
GROUP SCAN..... 2	
Naming a Memory Group..... 3	
Memory Group Link..... 3	
Clearing a Memory Group..... 3	
PROGRAM SCAN ..... 4	
Setting Scan Limits ..... 4	
Using Program Scan ..... 4	
MHz SCAN ..... 4	
CALL SCAN..... 4	

<b>CTCSS/ DCS/ CROSS TONE</b> .....	<b>CTCSS/ DCS/ CROSS TONE –</b>
USING CTCSS .....	1
CTCSS FREQUENCY SCAN .....	2
USING DCS.....	2
DCS CODE SCAN.....	3
USING CROSS TONE.....	3
Selecting a Cross Tone mode.....	3
<b>DUAL TONE MULTI-FREQUENCY (DTMF)</b> .....	<b>DTMF –</b>
MANUAL DIALING .....	1
DTMF Hold.....	1
AUTOMATIC DIALER.....	1
Storing a DTMF Code in Memory .....	1
Transmitting Stored DTMF Codes .....	2
Selecting a Transmit Speed .....	2
Selecting a Pause Duration.....	2
DTMF KEY LOCK.....	2
<b>EchoLink®</b> .....	<b>EchoLink –</b>
STORING ECHOLINK MEMORY .....	1
Transmitting EchoLink Memory.....	1
Selecting a Transmit Speed .....	2
<b>OTHER OPERATIONS</b> .....	<b>OTHER OP –</b>
FULL DUPLEX.....	1
POWER ON MESSAGE .....	1
DISPLAY ILLUMINATION .....	1
Illumination Timer.....	1
Lamp Control.....	1
Display Contrast.....	1
BATTERY SAVER .....	1
AUTO POWER OFF (APO) .....	2
BATTERY TYPE.....	2
KEY LOCK.....	2
Key Lock Type .....	2
Microphone Key Lock.....	2
VOLUME BALANCE (BAND A/B).....	2
KEY BEEP .....	3
PROGRAMMABLE VFO.....	3
CHANGING THE FREQUENCY STEP SIZE .....	3
PROGRAMMABLE FUNCTION KEYS .....	3
Transceiver PF Key.....	3
Microphone Keys .....	4
FREQUENCY DIRECT ENTRY.....	4
SWITCHING FM/AM MODE.....	4
ADVANCED INTERCEPT POINT (AIP) .....	4
BEAT SHIFT .....	4
TX INHIBIT .....	5
TIME-OUT TIMER .....	5
SELECTING AN OUTPUT POWER .....	5
VOX (VOICE-OPERATED TRANSMISSION) .....	5

**04\_CTCSS\_DCS\_CROSS TONE\_E.pdf**

**05\_DTMF\_E.pdf**

**06\_EchoLink\_E.pdf**

**07\_OTHER OPERATIONS\_E.pdf**

VOX Gain .....	5	
VOX Delay Time .....	6	
VOX on Busy.....	6	
MASKING BANDS.....	6	
POWER ON PASSWORD.....	6	
<b>GPS (GLOBAL POSITIONING SYSTEM).....GPS –</b>		<b>08_GPS_E.pdf</b>
INTERNAL GPS FUNCTION ON/OFF .....	2	
INTERNAL GPS SETUP .....	2	
Internal GPS operation mode.....	2	
Battery Saver (GPS Save) .....	3	
GPS DATA SETUP.....	3	
Land Survey System Datum .....	3	
Sentence .....	3	
SBAS .....	4	
TRACK LOG .....	4	
Track Log All Clear.....	4	
Overwriting the Track Log.....	4	
LOG SETUP .....	5	
Track Log Acquisition Type.....	5	
TARGET POINT .....	5	
MARK WAY POINT .....	6	
Copying the Mark Way Point to the Target Point.....	6	
Mark Way Point List .....	6	
Detailed Display of a Mark Waypoint .....	7	
<b>PACKET OPERATION .....</b>		<b>09_PACKET_E.pdf</b>
<b>PACKET MODE.....</b>	<b>1</b>	
<b>DATA BAND .....</b>	<b>1</b>	
<b>TNC COMMANDS LIST.....</b>	<b>2</b>	
<b>APRS® .....</b>		<b>10_APRS_E.pdf</b>
CONNECTING TO AN EXTERNAL GPS UNIT OR WEATHER STATION.....	2	
ADJUSTING THE INTERNAL CLOCK .....	2	
Setting Date .....	2	
Setting Time .....	2	
Setting UTC Offset .....	2	
RECEIVING APRS DATA.....	3	
ACCESSING RECEIVED APRS DATA.....	3	
DISPLAY EXAMPLE.....	4	
SORT FUNCTION .....	5	
DISPLAY FILTER FUNCTION.....	6	
RECEIVING A MESSAGE .....	6	
ENTERING A MESSAGE .....	7	
TRANSMITTING A MESSAGE.....	8	
ACCESSING RECEIVED APRS MESSAGES .....	8	
BASIC SETTINGS .....	9	
My Callsign.....	9	
Beacon Type .....	9	
APRS Lock.....	9	
SETTING INTERNAL TNC .....	10	
Data Band .....	10	

Packet Transfer Rate .....	10
DCD Sense .....	10
TX delay time .....	10
SETTING COM PORT .....	10
Baud Rate .....	10
Input Type .....	10
Output Type .....	11
SETTING WAY POINT .....	11
Way Point Format .....	11
Way Point Length.....	11
Way Point Output.....	11
PC PORT ON/OFF .....	11
Output .....	11
PROGRAMMING POSITION DATA .....	11
Select Position channel.....	11
Name Entry .....	11
Latitude Entry .....	11
Longitude Entry .....	11
SETTING BEACON INFORMATION .....	12
Speed Information.....	12
Altitude Information .....	12
Position Ambiguity.....	12
SELECTING A POSITION COMMENT .....	12
STORING STATUS TEXT .....	13
QSY FUNCTION.....	13
QSY Transmission Operation .....	14
Operation when Receiving a QSY .....	14
SETTING PACKET FILTER.....	14
Position Limit.....	14
Packet Filter Type .....	14
SELECTING YOUR STATION ICON.....	15
SETTING TX BEACON .....	16
Packet Transmit Method .....	16
Quick Beacon.....	16
Initial Interval Time .....	16
SETTING ALGORITHM.....	16
Decay Algorithm.....	16
Proportional Pathing.....	17
SETTING SmartBeaconing™.....	17
Low speed / High speed.....	17
Slow rate .....	17
Fast rate .....	17
Turn angle .....	17
Turn slope .....	17
Turn time .....	17
PROGRAMMING A PACKET PATH.....	18
NETWORK .....	19
VOICE ALERT .....	20
WEATHER STATION DATA OUTPUT .....	20
Transmit .....	20
Transmit Interval Time .....	20

SETTING AS A DIGIPEATER .....	21	
DIGIPEAT .....	21	
UICHECK .....	21	
UIDIGI .....	21	
UIFLOOD .....	21	
UITRACE .....	22	
STORING USER PHRASES .....	22	
Reply .....	22	
Reply To Callsign .....	22	
Reply Delay Time .....	22	
Reply Text .....	23	
PROGRAMMING A MESSAGE GROUP CODE .....	23	
SETTING SOUND .....	23	
RX Beep Type .....	23	
TX Beep .....	23	
Special Call Sound .....	23	
SETTING DISPLAY .....	24	
Display Area .....	24	
Interrupt Time .....	24	
Cursor Control .....	24	
SELECTING A DISPLAY UNIT .....	25	
Speed, Distance .....	25	
Altitude, Rainfall .....	25	
Temperature .....	25	
Latitude longitude .....	25	
Grid Format .....	25	
SELECTING A NAVITRA GROUP .....	25	
Group Mode .....	25	
Enter Group Code .....	25	
STORING NAVITRA MESSAGE .....	25	
DX PACKETCLUSTERS MONITOR .....	26	
Connecting TH-D72 with the HF Transceiver .....	26	
<b>TRANSCEIVER RESET .....</b>	<b>RESET –</b>	<b>11_RESET_E.pdf</b>
KEY OPERATION .....	1	
MENU MODE .....	1	
<b>SKY COMMAND SYSTEM II .....</b>	<b>SKY CMD –</b>	<b>12_SKY COMMAND_E.pdf</b>
CONNECTING THE TRANSPORTER WITH THE HF TRANSCEIVER .....	1	
PREPARATION FLOW .....	2	
PROGRAMMING CALLSIGNS .....	3	
PROGRAMMING A TONE FREQUENCY .....	3	
CONTROL OPERATION .....	3	
<b>WEATHER ALERT (TH-D72A ONLY) .....</b>	<b>WX –</b>	<b>13_WEATHER ALERT_TH-D72A_E.pdf</b>
WEATHER ALERT ON/ OFF .....	1	
Weather Channel .....	1	
WEATHER ALERT SCAN .....	1	
<b>WIRELESS OPERATION (TH-D72A ONLY) .....</b>	<b>WIRELESS OP –</b>	<b>14_WIRELESS_TH-D72A_E.pdf</b>
PREPARATION .....	1	
CONTROL OPERATION .....	1	