

TRANSCEIVER RESET

There are 3 types of transceiver reset available:

VFO Reset

Use to initialize the VFO and accompanying settings.

Partial Reset

Use to initialize all settings other than the Memory channels, the DTMF memory, and the PM channels.

FULL Reset

Use to initialize all transceiver settings that you have customized. (Date and time are not reset.)

There are 2 ways to perform a reset on the transceiver: by key operation and by accessing Menu mode.

KEY OPERATION

- 1 Turn the transceiver power OFF.
- 2 Press **[F] + Power ON**.
- 3 Press **[▲]/[▼]** or rotate the **Tuning** control and select your desired reset type: "VFO Reset", "Partial Reset", or "Full Reset".



▶Reset
UFO Reset

- 4 Press **[▶OK]** to set the reset type.
 - A confirmation message appears on the display.



UFO Reset
Sure?▶[OK]

- Press **[ESC ◀]** to cancel the reset.
- 5 Press **[▶OK]** again to perform the reset.


MENU MODE

- 1 Enter Menu mode and access Menu 199.



Auxiliary 199
▶Reset
UFO Reset

- 2 Press **[▲]/[▼]** or rotate the **Tuning** control and select your desired reset type: "VFO Reset", "Partial Reset", or "Full Reset".
- 3 Press **[▶OK]** to set the reset type.
 - A confirmation message appears on the display.

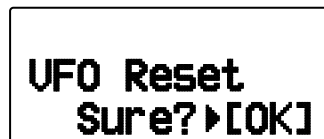

UFO Reset
Sure?▶[OK]

- Press **[ESC ◀]** to cancel the reset.
- 4 Press **[▶OK]** again to perform the reset.