

WEATHER ALERT (TH-D72A ONLY)

The Weather Alert is available only in the USA and Canada. When activated, this function will check for a received NOAA 1050 Hz tone. When the tone is received, the weather alert tone will sound.

WEATHER ALERT ON/ OFF

- 1 Enter Menu mode and access Menu 13B.



- 2 Set the Weather Alert to "On" or "Off".
 - When activated, the "WX" icon appears on the display.
 - When a signal is being received, the "WX" icon blinks.

■ Weather Channel

Whether or not the Weather Alert is activated, you can still access the weather channels. The Weather Alert simply notifies you of activity on the weather channels.


- 1 Press the key programmed with the [WX] function.
- 2 Press [▲]/[▼] or rotate the **Tuning** control to select your desired channel.

| Channel No. | Frequency (MHz) | Memory Name | Location |
|-------------|-----------------|-------------|--------------|
| A1 | 162.550 | WX 1 | NOAA/ Canada |
| A2 | 162.400 | WX 2 | NOAA/ Canada |
| A3 | 162.475 | WX 3 | NOAA/ Canada |
| A4 | 162.425 | WX 4 | NOAA |
| A5 | 162.450 | WX 5 | NOAA |
| A6 | 162.500 | WX 6 | NOAA |
| A7 | 162.525 | WX 7 | NOAA |
| A8 | 161.650 | WX 8 | Canada |
| A9 | 161.775 | WX 9 | Canada |
| A10 | 163.275 | WX 10 | — |

WEATHER ALERT SCAN

The memory channel only for the weather alert is scanned.

- 1 Enter Menu mode and access Menu 13C.

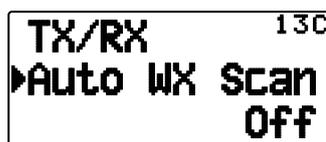

- 2 Set the Weather Alert Scan to "Off" or "15/ 30/ 60 (min)".

When the weather channel scanning time is set:

Auto scanning starts after the set time.

When the weather channel scanning is set to Off:

Press and hold the key programmed with the [WX] function to start the weather channel scan.

- Scanning stops when the channel with the highest signal level is received.
- Memory scanning stops when performing any operation other than [LAMP], [MONI], [key lock] ([F](1s)), [▲]/[▼], and Tuning control.